

SLIM DRAWER SYSTEM · GTV AXIS PRO · PUSH TO OPEN

AXIS PRO 300 mm

Extra High Drawer, *push to open*

A complete GTV AXIS PRO drawer set in anthracite: slim 14 mm steel sides, 200 mm high, on full extension runners with push-to-open for handleless fronts. Add a 16 mm base, back panel and your front to build one drawer.

COMPLETE DRAWER SET



LOAD RATING

40 kg

NOMINAL LENGTH

300 mm

SIDE HEIGHT

200 mm · extra high

OPENING

Push to open

FRONT ADJUSTMENT

±2 mm, 2-way

TESTED TO

60,000 cycles

Specification

Product code	PB-AXISPRO-P2O-KPL300D	Colour	Anthracite
Supplied as	Complete set for one drawer	Side thickness	14 mm slim steel
Nominal length (NL)	300 mm	Drawer height (overall)	222 mm
Side height	200 mm (extra high "D")	Min. clear opening height	230 mm
Extension	Full extension	Base panel (16 mm)	(W – 75) × 276 mm
Function	Push to open	Back panel (16 mm)	(W – 87) × 199 mm
Load capacity	Up to 40 kg	Screws	Included

Ideal for

Kitchen base units

Handleless kitchens

Bathroom vanities


Bedroom chests

Office pedestals

Utility rooms

Drawer base & back panel

Front view of the cabinet opening

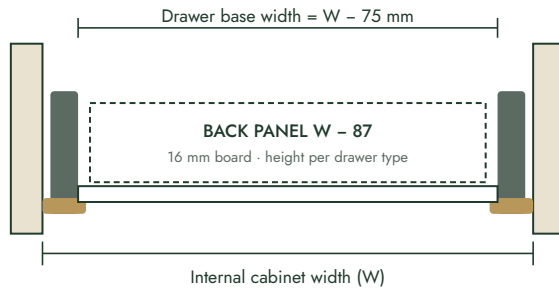


Base = (W - 75) × 276 mm · Back = (W - 87) × 199 mm

Both from 16 mm board. Example: 600 mm cabinet → base 525 mm wide, back 513 mm wide.

Cabinet & drawer depth

Side view, runner fixed to cabinet side

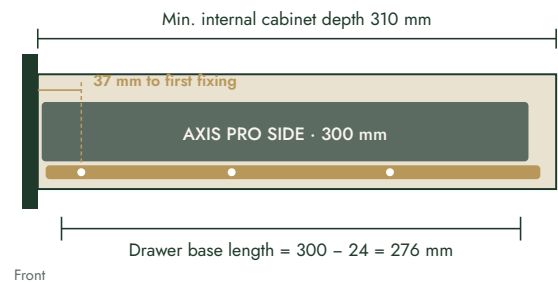

Cabinet at least 310 mm deep inside (inset fronts: add the front thickness).

Clear opening height for a extra high drawer: at least 230 mm.

Fitting in six steps

01 Cut the panels

From 16 mm board cut the base (W - 75) × (NL - 24) mm and the back (W - 87) × 199 mm.

03 Fix the runners

Screw the runners to the cabinet sides, level and parallel, first fixing 37 mm back from the cabinet front edge.

05 Hang the drawer

Sit the drawer box on the extended runners, push it home until it clicks, then clip the front on.

02 Build the drawer box

Fit the rear connectors to the back panel, slide the base into the sides and screw the back panel in place.

04 Prepare the front

Fit the front connectors to the back of the front, first fixing at least 47.5 mm up from its bottom edge.

06 Adjust and check

Fine-tune the front ±2 mm in height and ±2 mm sideways for even gaps, then check the push to open action.

Good to know

- Fixing screws are included in every set. You make the base and back panel from 16 mm board.
- The drawer should not be wider than the runner length – for wider push to open drawers GTV recommends the AXIS PRO synchronising bar.
- For drawer fronts taller than 284 mm, GTV recommends adding the AXIS PRO longitudinal rails for extra rigidity.
- Load up to 40 kg per drawer; spread heavy pans and tins evenly.
- Push to open needs a handleless front with a small gap all round so the front can move inward.
- Wipe clean with a damp cloth and mild detergent; no abrasive cleaners.

AXIS PRO extra high push to open – lengths in stock

Every length uses the same fitting method and panel formulas. Choose the longest that fits your cabinet depth.

300 mm

350 mm

400 mm

450 mm

500 mm

550 mm



SCAN TO ORDER

Technical data from the manufacturer's published installation instructions for the GTV AXIS PRO drawer system. Dimensions in millimetres; panel sizes are for 16 mm board. Always test-fit before final fixing. GTV and AXIS PRO are trademarks of GTV Poland S.A.; ABJ Accessories is an independent UK stockist. Questions about fitting or bulk orders: info@abjaccessories.co.uk.