

FIT-OUT PACK · ALL GENUINE GTV

# Kitchen Base Unit Fit-Out Pack, *one unit*

The small parts for one kitchen base unit: four ML heavy-duty adjustable legs with plinth clips, two Silento Pro soft-close hinges with plates, and 100 silicone door buffers.

LEGS · HINGES · BUFFERS



LEGS

4 + 4 clips

PLINTH

100/150 mm

HINGES

2 soft close

BUFFERS

100

DOORS

Overlay or  
inset

SAVES

~5 %

## Specification

|                |                                         |                 |                         |
|----------------|-----------------------------------------|-----------------|-------------------------|
| Legs           | 4 × ML 85–125 or 125–195 mm             | Hinge cup       | Ø35 mm, 12 mm deep      |
| Plinth clips   | 4 × NM-MLA-KL                           | Cup edge K      | 3–5 mm                  |
| Hinges         | 2 × Silento Pro (full overlay or inset) | Plate fixing    | 32 mm holes, 37 mm back |
| Plates         | 2 × clip-on H0                          | Opening         | 102°                    |
| Buffers        | 100 × Ø7 mm silicone                    | Double doors    | Add a pair of hinges    |
| Plinth heights | 100 mm or 150 mm                        | Wider units     | Add legs at the back    |
| Leg load       | 450 kg (GTV spec table)                 | Screws for legs | Not included            |

## Ideal for

Kitchen base units

Sink units

Utility units


Islands

Laundry rooms

Garage kitchens

## Legs & plinth


Side view of a base unit

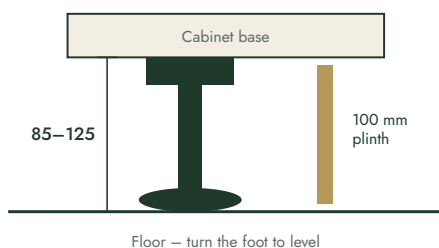

**85–125 mm legs** for a 100 mm plinth; **125–195 mm** for 150 mm.

## Hinge drilling

Inside face of the door

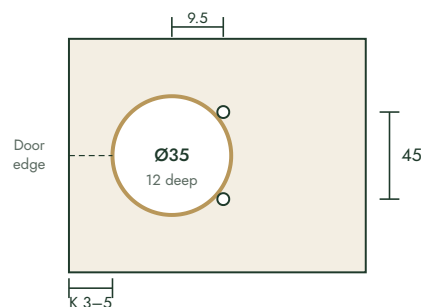

**Ø35 mm cups**, 3–5 mm from the edge. Full overlay 15–17 mm with H0 plates.

## Fitting in six steps

### 01 Fit the legs

Screw the four legs under the base, set in from the sides and front.

### 03 Hang the door

Bore the cups, fit the hinges and plates, and clip the door on.

### 05 Add buffers

Stick buffers where the door meets the cabinet.

### 02 Level the unit

Stand the unit in place and level it by turning the feet.

### 04 Adjust

Set the door gaps with the 3D adjustment.

### 06 Fit the plinth

Fix the clips to the back of the plinth and push it onto the legs.

## Good to know

- Level the whole run before fixing units together.
- Use the inset option only for inset (in-frame) doors.
- Add a 5th/6th leg on 800–1000 mm units.
- Plinth pulls off for access to pipes.
- Soft close is built into the hinges.
- Keep spare buffers for other doors.

## Options

100 or 150 mm plinth, with full overlay or inset hinges.

100 mm · overlay

100 mm · inset

150 mm · overlay

150 mm · inset



SCAN TO ORDER

Technical data from the manufacturer's published product card and technical sheet for GTV ML legs, Silento Pro hinges and buffers. Dimensions in millimetres. Always test-fit before final fixing. GTV is a trademark of GTV Poland S.A.; ABJ Accessories is an independent UK stockist. Questions about fitting or bulk orders: [info@abjaccessories.co.uk](mailto:info@abjaccessories.co.uk).