

WARDROBE PULL-OUT · GTV ELITE COLLECTION

600 mm Pull-Out Metal Shoe Drawer, *soft close*

A pull-out wardrobe shoe drawer with two angled, solid perforated metal shelves — smart, easy to wipe and kind to suede and heels. Concealed full-extension runners with soft close; the frame adjusts to your wardrobe width.

RUNNERS & SCREWS INCLUDED



WARDROBE WIDTH

600 mm unit

FITS INSIDE

560–618 mm

MIN. DEPTH

500 mm inside

HEIGHT

165 mm

EXTENSION

Full

CLOSING

Soft close

Specification

Product code	WG-POBUWM60-10 / -20 / -60	Runners	Concealed, full extension, soft close
Collection	GTV ELITE	Min. internal depth	500 mm
Type	Metal shoe drawer — 2-tier solid perforated shelves	Fixing	Screwed to the side panels
For wardrobe width	600 mm	Material	Steel + plastic
Internal width range	560–618 mm	Colours	White, black, anthracite
Product depth	483 mm	Screws included	Yes
Product height	165 mm	Packaging	Individually packed

Ideal for

Fitted wardrobes

Walk-in wardrobes

Hallway cupboards


Boot rooms

Bedroom furniture

Dressing rooms

Wardrobe width


Front view of the wardrobe section

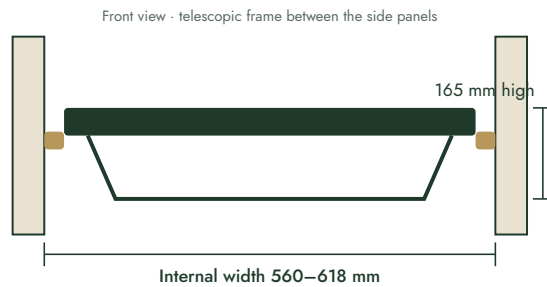

Fits an internal width of 560–618 mm – the frame adjusts by up to 58 mm. Measure between the side panels at the height you will fit it.

Depth & fixing points

Side view of the side panel

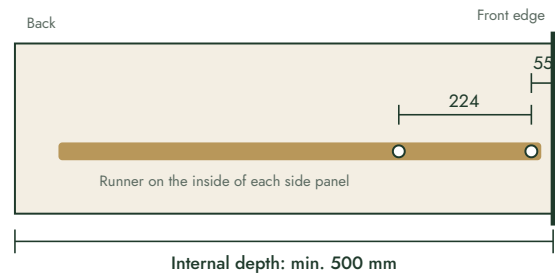

Internal depth at least 500 mm. Product depth 483 mm. Runner fixings: first 55 mm from the front edge, then 224 mm behind it.

Fitting in six steps

- 01 Plan the height**
Decide where the pull-out goes and mark a level line on both side panels at the same height.
- 02 Mark the fixings**
On each side, mark the first fixing 55 mm from the front edge and the second 224 mm further back.
- 03 Fix the runners**
Screw a runner to the inside of each side panel on your marks, level and parallel.
- 04 Fit the frame**
Set the frame width to suit, sit it on the runners and push it back until it clicks in on both sides.
- 05 Add the insert**
Drop the metal shoe drawer into the frame and secure it with the end connectors.
- 06 Adjust and check**
Pull it out fully and push it closed – it should run smoothly and close softly. Fine-tune the front if needed.

Good to know

- Check your wardrobe is square: measure the internal width at the front and the back.
- Leave enough room above the pull-out for what you will store in it.
- Fit the lowest pull-out first and work upwards.
- Soft close engages in the last part of the travel – a gentle push is enough.
- Spread the load evenly; do not stand on or climb on pull-outs.
- Wipe with a soft, damp cloth. No abrasive pads or solvents.

The ELITE metal shoe drawer – every wardrobe width

Choose the size that matches your wardrobe section. Colours: white, black, anthracite.

600 mm

700 mm

800 mm

900 mm



SCAN TO ORDER

Technical data from the manufacturer's published product card and fitting instructions for the GTV ELITE wardrobe range. Dimensions in millimetres. Always check your cabinet before fixing. GTV is a trademark of GTV Poland S.A.; ABJ Accessories is an independent UK stockist. Questions about fitting or bulk orders: info@abjaccessories.co.uk.