

BAR HANDLE · GTV IMPERIAL COLLECTION

IMPERIAL 256 mm Bar Handle, *matt black*

A classic bar handle with stepped, architectural square posts, made in zinc alloy. Adds a tailored, premium finish to shaker kitchens and furniture.

SCREWS INCLUDED



HOLE CENTRES

256 mm

LENGTH

290 mm

PROJECTION

34 mm

BAR WIDTH

16 mm

MATERIAL

Zinc alloy

FIXINGS

2 × M4

Specification

Product code	UZ-IMPERIAL-256-20M	Material	Zinc alloy (ZnAl, zamak)
Collection	GTV IMPERIAL	Colour	Matt black
Supplied as	1 handle + screws	Surface	Painted
Hole centres (C)	256 mm	Screws	M4 × 25 mm (included)
Overall length (L)	290 mm	Drill size	Ø5 mm through the front
Projection from front	34 mm	Style	Classic
Bar width	16 mm	Packaging	Individually packed

Ideal for

Kitchen doors

Drawer fronts

Pan drawers


Bedroom furniture

Bathroom vanities

Utility rooms

Drilling template


Front view of the handle on the door

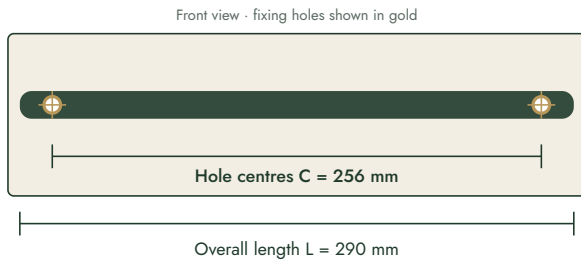

Hole centres C = 256 mm. The handle overhangs each hole by 17 mm.
To centre on a front: first hole = $(\text{front width} - C) \div 2$ from the edge.

Side profile & screw length

Section through the door

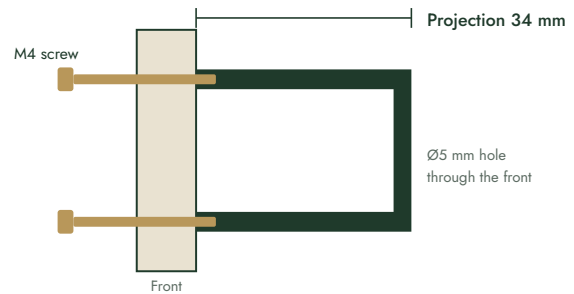

Projection 34 mm from the face of the front.
Screw length $\approx$ front thickness + 4–5 mm (18 mm front $\rightarrow$ M4 $\times$ 22 mm).

Fitting in six steps

01 Choose the position

Drawers: usually centred, horizontal. Doors: vertical, 30–60 mm in from the opening edge. Keep it the same across the room.

03 Drill the holes

Drill Ø5 mm straight through, square to the face. Clamp a scrap block behind to stop the back breaking out.

05 Fix the handle

Push the screws through from the back and thread them into the handle. Tighten by hand.

02 Mark the holes

Mark the two hole centres exactly 256 mm apart. A drilling jig makes repeat doors quick and accurate.

04 Check the screws

Screws should be front thickness + 4–5 mm. For thicker or panelled fronts use longer M4 screws.

06 Check and finish

Check the handle is level or plumb, then nip the screws up. Do not overtighten – the threads are in the handle.

Good to know

- Measure twice, drill once: test the hole spacing on a scrap piece first.
- On high-gloss or painted fronts, put masking tape over the marks before drilling.
- Use a sharp wood or brad-point bit for clean holes.
- Clean with a soft, damp cloth and dry. No abrasive pads or solvents.
- Avoid bleach and limescale removers near plated finishes.
- For indoor furniture. Keep away from direct heat sources.

The IMPERIAL collection at ABJ

Same design and finish quality across the range. Choose a size and colour to match the rest of your room.

- Knob · Matt black Knob · Brushed gold 192 mm · Matt black 192 mm · Brushed gold 256 mm · Matt black
- 256 mm · Brushed gold 320 mm · Brushed gold 320 mm · Matt black



SCAN TO ORDER

Technical data from the manufacturer's published product card for the GTV IMPERIAL collection. Dimensions in millimetres and may vary by ± 1 mm. Always check hole positions on a scrap piece before drilling. GTV is a trademark of GTV Poland S.A.; ABJ Accessories is an independent UK stockist. Questions about fitting or bulk orders: info@abjaccessories.co.uk.