

CABINET KNOB · GTV IMPERIAL COLLECTION

IMPERIAL Cabinet Knob,

matt black

A T-bar knob with a stepped, architectural base, made in zinc alloy. Matches the IMPERIAL bar handles for doors, drawers and dressers.

SCREW INCLUDED



FIXING

1 × M4 screw

LENGTH

50 mm

WIDTH

16 mm

PROJECTION

34 mm

MATERIAL

Zinc alloy

DRILL

Ø5 mm

Specification

Product code	GZ-IMPERIAL-1-20M	Material	Zinc alloy (ZnAl, zamak)
Collection	GTV IMPERIAL	Colour	Matt black
Type	T-bar knob with stepped base	Surface	Painted
Length	50 mm	Screws included	Yes
Width	16 mm	Drill size	Ø5 mm through the front
Projection from front	34 mm	Style	Classic
Fixing	Single central M4 screw	Packaging	Individually packed

Ideal for

Kitchen doors

Drawer fronts

Bedroom furniture


Dressers & chests

Bathroom vanities

Utility rooms

Size & fixing point


Front view of the knob on the door

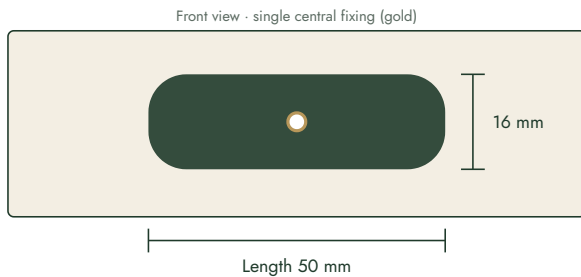

One fixing at the centre of the knob. Drill Ø5 mm straight through the front.
T-bar knob — set it level (drawers) or upright (doors) before the final turn.

Side profile & screw length

Section through the door

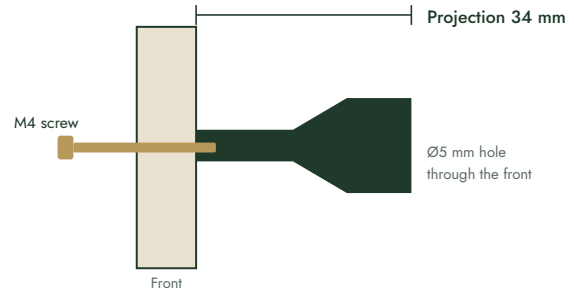

Projection 34 mm from the face of the front.
Screw length $\approx$ front thickness + 4–5 mm (18 mm front $\rightarrow$ M4 $\times$ 22 mm).

Fitting in six steps

01 Choose the position

Doors: usually 50–80 mm in from the opening edge and corner. Drawers: centred. Keep every knob in the room at the same position.

03 Drill the hole

Drill Ø5 mm straight through, square to the face. Clamp a scrap block behind to stop the back breaking out.

05 Fix the knob

Push the screw through from the back and thread it into the knob. Tighten by hand.

02 Mark the centre

Mark the fixing point with a pencil cross. A simple card or drilling jig keeps every door the same.

04 Check the screw

The screw should be front thickness + 4–5 mm. For thick or panelled fronts use a longer M4 screw.

06 Align and finish

Turn the knob to its final position, then nip the screw up. Do not overtighten — the thread is in the knob.

Good to know

- Test the position on one door first, then make a template for the rest.
- On high-gloss or painted fronts, put masking tape over the mark before drilling.
- Use a sharp wood or brad-point bit for a clean hole.
- Clean with a soft, damp cloth and dry. No abrasive pads or solvents.
- Avoid bleach and limescale removers near plated finishes.
- For indoor furniture. Keep away from direct heat sources.

The IMPERIAL collection at ABJ

Same design and finish quality across the range. Choose a size and colour to match the rest of your room.

Knob · Matt black

Knob · Brushed gold

192 mm · Matt black

192 mm · Brushed gold

256 mm · Matt black

256 mm · Brushed gold

320 mm · Brushed gold

320 mm · Matt black



SCAN TO ORDER

Technical data from the manufacturer's published product card for the GTV IMPERIAL collection. Dimensions in millimetres and may vary by ± 1 mm. Always check hole positions on a scrap piece before drilling. GTV is a trademark of GTV Poland S.A.; ABJ Accessories is an independent UK stockist. Questions about fitting or bulk orders: info@abjaccessories.co.uk.