


UNDERMOUNT DRAWER RUNNERS · GTV MODERN SLIDE PRO

Undermount Soft Close Drawer Runners, *3D adjustable*

Concealed, full extension undermount runners for wooden drawer boxes made from 18 mm board. Built-in soft close and synchronisation for a smooth, even run, with 3D front adjustment. Sold as a pair with locking devices, in lengths from 250 to 600 mm.

PAIR + LOCKING DEVICES

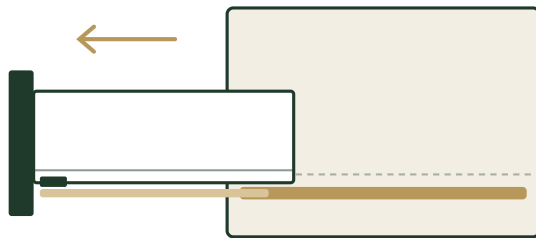

LOAD RATING

35 kg / pair

LENGTHS

250–600 mm

EXTENSION

Full

DRAWER SIDES

18 mm (max 19)

ADJUSTMENT

3D front

BOX LENGTH

NL–10 mm

Specification

Product code	PB-3D0SHX18-[length]-PRO	Drawer side thickness	18 mm board (max 19 mm)
Supplied as	1 pair + 2 locking devices	Height adjustment	0 to +3 mm
Nominal lengths (NL)	250 – 600 mm, 50 mm steps	Side adjustment	±1.5 mm
Extension type	Full extension (30 mm extension loss)	Depth adjustment	0 to 5 mm
Load capacity	Up to 35 kg per pair	Material / finish	Steel, zinc plated
Function	Soft close + synchronisation	Drawer box length	Runner length – 10 mm
Mounting	Under the drawer, cabinet side fixed	Packed	10 pairs per carton

Ideal for

Handle or handleless kitchens

Wide pan drawers

Bedroom chests


Bathroom vanities

Office pedestals

Bespoke furniture

Drawer box width

Front view; runners sit under the drawer box

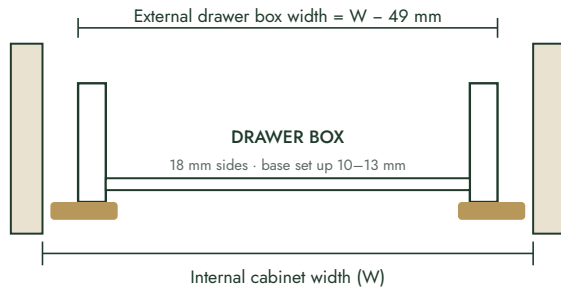


External drawer box width = internal cabinet width – 49 mm

Drawer sides 18 mm (max 19 mm); drawer base set up 10–13 mm from the bottom edge of the sides.

Cabinet & drawer depth

Side view, runner fixed to cabinet side

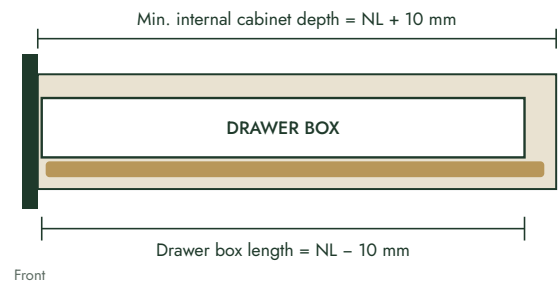

Drawer box length = NL – 10 mm (e.g. 450 mm runner → 440 mm box).

Inset front (thickness X): cabinet at least NL + X + 10 mm inside.

Fitting in six steps

01 Make the drawer box

Build the box from 18 mm board, NL – 10 mm long, with the base set up 10–13 mm so the runners fit underneath.

03 Fit the locking devices

Screw a locking device under each front corner of the drawer box, so it lines up with the runner.

05 Engage the drawer

Pull the runners out, sit the drawer box on them and push it home until the locking devices click on.

02 Prepare the box

Notch the back panel at each end to clear the runners, and mark the locking device positions under the front corners.

04 Fix the cabinet runners

Screw the runners to the cabinet sides, level and parallel, first fixing 37 mm back from the cabinet front edge.

06 Adjust the front

Use the locking devices to fine-tune height (0–3 mm), side (±1.5 mm) and depth so the gaps are even.

Good to know

- Undermount runners are for wooden drawer boxes; the drawer box must be square for a smooth run.
- Measure the internal cabinet depth before ordering and choose the longest runner that fits (cabinet ≥ NL + 10 mm).
- Do not exceed 35 kg per pair; spread heavy items evenly.
- Soft close engages in the last part of the travel. Close the drawer with a gentle push.
- Synchronisation keeps both sides running together, even when you pull from one corner.
- Keep runners free of dust and debris; wipe clean with a dry cloth, no solvents.

Choose your length – one product, eight sizes

Select the runner length on the product page. Drawer box length is always the runner length minus 10 mm.

250 mm

300 mm

350 mm

400 mm

450 mm

500 mm

550 mm

600 mm



SCAN TO ORDER

Technical data from the manufacturer's published data for the GTV Modern Slide PRO undermount range (PB-3DOSH18-PRO). Dimensions in millimetres. Always test-fit before final fixing. GTV is a trademark of GTV Poland S.A.; ABJ Accessories is an independent UK stockist. Questions about fitting or bulk orders: info@abjaccessories.co.uk.