


HANDLELESS 3-DRAWER KIT · GTV AXIS PRO · PUSH TO OPEN

AXIS PRO 450 mm

Handleless 3-drawer kit, *push to open*

Everything for 3 GTV AXIS PRO drawers in one kit (low 86 mm, medium 120 mm, high 168 mm), in anthracite with slim 14 mm sides and full extension runners with push-to-open for handleless fronts. Add 16 mm base and back panels and your fronts.

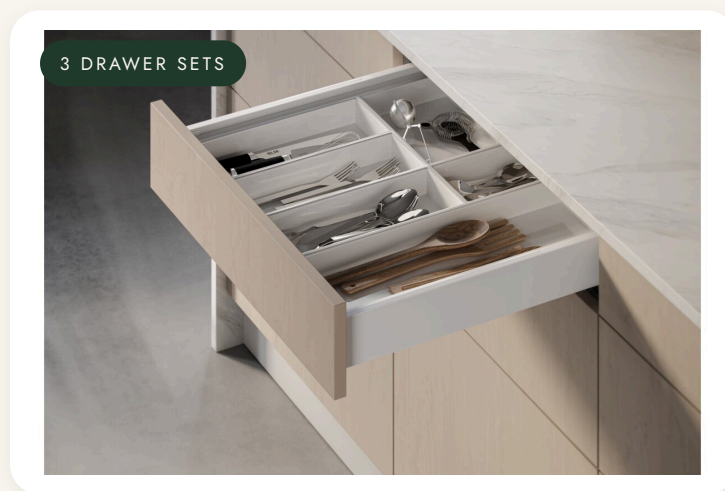

DRAWERS

3 complete sets

NOMINAL LENGTH

450 mm

LOAD RATING

40 kg per drawer

OPENING

Push to open

FRONT ADJUSTMENT

±2 mm, 2-way

TESTED TO

60,000 cycles

Specification

Contents	3 AXIS PRO sets (low, medium, high)	Side thickness	14 mm slim steel
Nominal length (NL)	450 mm	Base panels (16 mm)	(W – 75) × 426 mm each
Side heights	low 86 mm, medium 120 mm, high 168 mm	Back panels (16 mm)	(W – 87) × 84 / 116 / 167 mm
Extension	Full extension	Min. cabinet depth	460 mm inside
Function	Push to open	Min. clear heights	115 / 147 / 198 mm
Load capacity	Up to 40 kg per drawer	Screws	Included
Colour	Anthracite	Tested durability	60,000 cycles

Ideal for

Kitchen base units

Handleless kitchens

Bathroom vanities


Bedroom chests

Utility rooms

Bespoke furniture

Drawer base & back panels


Front view of the cabinet opening

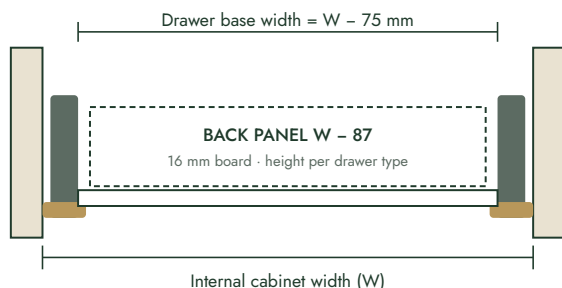

Base = $(W - 75) \times 426$ mm for every drawer.
 Backs: Low: $(W - 87) \times 84$ · Medium: $(W - 87) \times 116$ ·
 High: $(W - 87) \times 167$ mm (16 mm board).

Cabinet & drawer depth

Side view, runner fixed to cabinet side

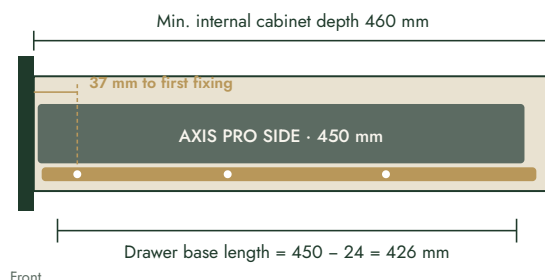

Cabinet at least 460 mm deep inside (inset fronts: add the front thickness).
 Clear opening heights: low 115 mm, medium 147 mm, high 198 mm.

Fitting in six steps

01 Cut the panels

From 16 mm board cut 3 bases $(W - 75) \times 426$ mm and the backs $(W - 87) \times$ the back height for each drawer type.

03 Fix the runners

Set out the runner heights to suit your fronts, then fix each pair level, first fixing 37 mm back from the cabinet front.

05 Hang the drawers

Start with the bottom drawer: sit each box on its runners, push home until it clicks, then clip the front on.

02 Build each box

Fit the rear connectors to each back panel, slide the base into the sides and screw the back in place.

04 Prepare the fronts

Fit the front connectors to each front, first fixing at least 47.5 mm up from its bottom edge.

06 Adjust and check

Fine-tune each front ± 2 mm up/down and sideways for even gaps, then check the push to open action.

Good to know

- Fixing screws are included in every set. You make the base and back panel from 16 mm board.
- The drawer should not be wider than the runner length – for wider push to open drawers GTV recommends the AXIS PRO synchronising bar.
- For drawer fronts taller than 284 mm, GTV recommends adding the AXIS PRO longitudinal rails for extra rigidity.
- Load up to 40 kg per drawer; spread heavy pans and tins evenly.
- Push to open needs a handleless front with a small gap all round so the front can move inward.
- Wipe clean with a damp cloth and mild detergent; no abrasive cleaners.

Also available as single drawer sets

Need a different mix? Every AXIS PRO height is sold separately in lengths from 250 to 550 mm.

Low 86 mm

Medium 120 mm

High 168 mm

Extra high 200 mm



SCAN TO ORDER

Technical data from the manufacturer's published installation instructions for the GTV AXIS PRO drawer system. Dimensions in millimetres; panel sizes are for 16 mm board. Always test-fit before final fixing. GTV and AXIS PRO are trademarks of GTV Poland S.A.; ABJ Accessories is an independent UK stockist. Questions about fitting or bulk orders: info@abjaccessories.co.uk.