

PUSH TO OPEN + SOFT CLOSE RUNNERS · GTV VERSALITE PRO

300 mm Push to Open Drawer Runners, *soft close*

GTV Versalite PRO ball bearing side-mount runners that combine push-to-open with soft close: press the drawer front to open, and it closes gently on its own. Sold as a pair (left and right) for one handleless drawer.

SOLD AS A PAIR



LOAD RATING

30 kg / pair

NOMINAL LENGTH

300 mm

EXTENSION

Partial

SIDE CLEARANCE

12.7 mm each side

PROFILE HEIGHT

45 mm (H45)

TESTED TO

60,000 cycles

Specification

Product code	PK-L-P2O-H45-300	Profile	H45 · 45.3 mm high · 12.7 mm thick
Supplied as	1 pair – left + right runner	Material	Steel
Nominal length (NL)	300 mm	Colour / finish	Zinc plated (silver)
Extension type	Partial extension (52 mm short of full)	Bearings	Steel ball bearings
Load capacity	Up to 30 kg per pair	Durability test	60,000 open/close cycles
Function	Push to open + soft close	Drawer removal	Quick-release (disconnect)
Mounting	Side mount	Packed	Individually, 15 pairs per carton

Ideal for

Handleless kitchens

Bedroom furniture

Wardrobe drawers


Living room units

Bathroom vanities

Office storage

Drawer box width

Front view of the cabinet opening

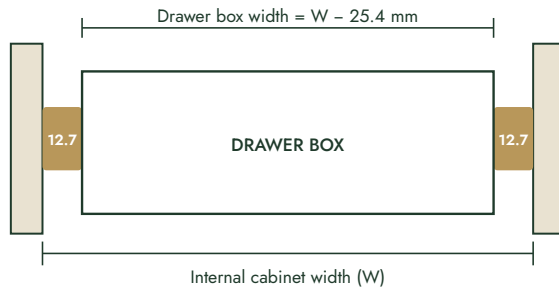


Drawer box width = internal cabinet width – 25.4 mm

12.7 mm per side (+0.3 mm). Example: 600 mm opening → 574.6 mm drawer box.

Cabinet & drawer depth

Side view, runner fixed to cabinet side

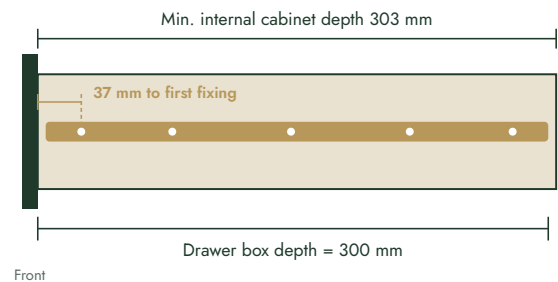

Overlay front: drawer box 300 mm deep; cabinet at least 303 mm inside.

Inset front (thickness X): set runner back 37 + X mm; cabinet at least 303 + X mm inside.

Fitting in six steps

01 Separate each runner

Pull the runner to full extension and press the release lever to slide the inner (drawer) member out.

03 Fix the cabinet members

Line up with the mark, first fixing 37 mm back from the cabinet front edge (37 mm + front thickness for inset drawers).

05 Engage the drawer

Line the drawer members up with the cabinet members, keep the drawer level and push it home until both sides click in.

02 Mark a level line

Draw a level line on both cabinet sides at the runner height you need, measured from the same reference.

04 Fix the drawer members

Screw the inner members to the drawer box sides, first fixing 35 mm back from the front of the box, parallel to the base.

06 Check the action

Run the drawer through its full travel and check it opens with a light press on the front and closes softly.

Good to know

- Fix through the slotted holes so you can fine-tune the position before adding the final screws.
- The drawer box should not be wider than the runner length (300 mm).
- Spread the load evenly and do not exceed 30 kg per pair.
- Push to open works best on handleless fronts; no handle or knob is needed.
- Check that the front has room to move inward slightly so the push latch can release.
- Keep runners free of dust and debris; wipe clean with a dry cloth, no solvents.

The full Versalite PRO range, in stock

Same fitting and clearances in every length. Choose the longest runner that fits your cabinet depth.

300 mm

350 mm

400 mm

450 mm

500 mm

550 mm

600 mm

700 mm



SCAN TO ORDER

Technical data from the manufacturer's published data for the GTV Versalite PRO H45 push to open ball bearing slide range (PK-L-P2O-H45). Dimensions in millimetres. Always test-fit before final fixing. GTV is a trademark of GTV Poland S.A.; ABJ Accessories is an independent UK stockist. Questions about fitting or bulk orders: info@abjaccessories.co.uk.