TECHNICAL DATA SHEET

Ref. ABJ-TDS-PB-AXISPRO-KPL500A · Rev. A · October 2026

Product code PB-AXISPRO-KPL500A

SLIM DRAWER SYSTEM · GTV AXIS PRO · SOFT CLOSE

AXIS PRO 500 mm Low Drawer, *soft close*

A complete GTV AXIS PRO drawer set in anthracite: slim 14 mm steel sides, 86 mm high, on full extension runners with built-in soft close. Add a 16 mm base, back panel and your front to build one drawer.

COMPLETE DRAWER SET

LOAD RATING	40 kg
NOMINAL LENGTH	500 mm
SIDE HEIGHT	86 mm · low
OPENING	Soft close
FRONT ADJUSTMENT	±2 mm, 2-way
TESTED TO	60,000 cycles

Specification

Product code	**PB-AXISPRO-KPL500A**	Colour	**Anthracite**
Supplied as	**Complete set for one drawer**	Side thickness	**14 mm slim steel**
Nominal length (NL)	**500 mm**	Drawer height (overall)	**107 mm**
Side height	**86 mm (low "A")**	Min. clear opening height	**115 mm**
Extension	**Full extension**	Base panel (16 mm)	**(W – 75) × 476 mm**
Function	**Soft close**	Back panel (16 mm)	**(W – 87) × 84 mm**
Load capacity	**Up to 40 kg**	Screws	**Included**

Ideal for

Kitchen base units · Pan & cutlery drawers · Bathroom vanities · Bedroom chests · Office pedestals · Utility rooms

Drawer base & back panel

Front view of the cabinet opening

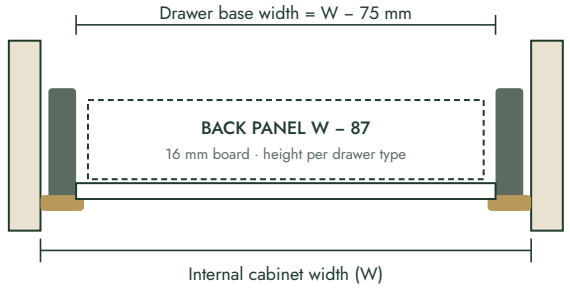

Base = (W – 75) × 476 mm · Back = (W – 87) × 84 mm
Both from 16 mm board. Example: 600 mm cabinet → base 525 mm wide, back 513 mm wide.

Cabinet & drawer depth

Side view, runner fixed to cabinet side

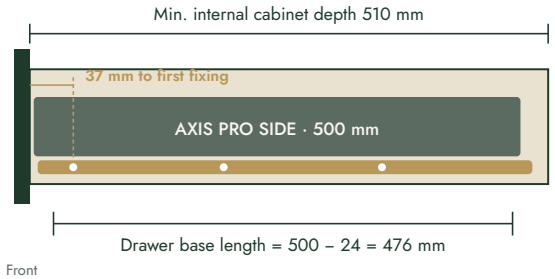

Cabinet at least 510 mm deep inside (inset fronts: add the front thickness).
Clear opening height for a low drawer: at least 115 mm.

Fitting in six steps

01 Cut the panels
From 16 mm board cut the base (W – 75) × (NL – 24) mm and the back (W – 87) × 84 mm.

02 Build the drawer box
Fit the rear connectors to the back panel, slide the base into the sides and screw the back panel in place.

03 Fix the runners
Screw the runners to the cabinet sides, level and parallel, first fixing 37 mm back from the cabinet front edge.

04 Prepare the front
Fit the front connectors to the back of the front, first fixing at least 47.5 mm up from its bottom edge.

05 Hang the drawer
Sit the drawer box on the extended runners, push it home until it clicks, then clip the front on.

06 Adjust and check
Fine-tune the front ±2 mm in height and ±2 mm sideways for even gaps, then check the soft close action.

Good to know

- Fixing screws are included in every set. You make the base and back panel from 16 mm board.
- The drawer should not be wider than the runner length.
- For drawer fronts taller than 284 mm, GTV recommends adding the AXIS PRO longitudinal rails for extra rigidity.
- Load up to 40 kg per drawer; spread heavy pans and tins evenly.
- Soft close engages in the last part of the travel; close the drawer with a gentle push.
- Wipe clean with a damp cloth and mild detergent; no abrasive cleaners.

AXIS PRO low soft close – lengths in stock

Every length uses the same fitting method and panel formulas. Choose the longest that fits your cabinet depth.

250 mm · 300 mm · 350 mm · 400 mm · 450 mm · **500 mm** · 550 mm

SCAN TO ORDER

Technical data from the manufacturer's published installation instructions for the GTV AXIS PRO drawer system. Dimensions in millimetres; panel sizes are for 16 mm board. Always test-fit before final fixing. GTV and AXIS PRO are trademarks of GTV Poland S.A.; ABJ Accessories is an independent UK stockist. Questions about fitting or bulk orders: info@abjaccessories.co.uk.