BAR HANDLE · GTV BAGIO COLLECTION

# BAGIO 320 mm Bar Handle, *champagne*

A slim, square-cornered bar handle in zinc alloy. The crisp 90° legs and 8.5 mm bar give handled kitchens and bedrooms a clean, contemporary line.

SCREWS INCLUDED

| | |
|---|---|
| HOLE CENTRES | 320 mm |
| LENGTH | 328 mm |
| PROJECTION | 28 mm |
| BAR WIDTH | 8.5 mm |
| MATERIAL | Zinc alloy |
| FIXINGS | 2 × M4 |

## Specification

| | |
|---|---|
| Product code | UZ-BAGIO-320-90 |
| Collection | GTV BAGIO |
| Supplied as | 1 handle + screws |
| Hole centres (C) | 320 mm |
| Overall length (L) | 328 mm |
| Projection from front | 28 mm |
| Bar width | 8.5 mm |
| Material | Zinc alloy (ZnAl, zamak) |
| Colour | Champagne |
| Surface | Plated |
| Screws | M4 (included) |
| Drill size | Ø5 mm through the front |
| Style | Modern |
| Packaging | Individually packed |

## Ideal for

Kitchen doors · Drawer fronts · Pan drawers · Bedroom furniture · Bathroom vanities · Utility rooms

## Drilling template

Front view of the handle on the door

**Hole centres C = 320 mm**. The handle overhangs each hole by 4 mm.
To centre on a front: first hole = (front width − C) ÷ 2 from the edge.

## Side profile & screw length

Section through the door

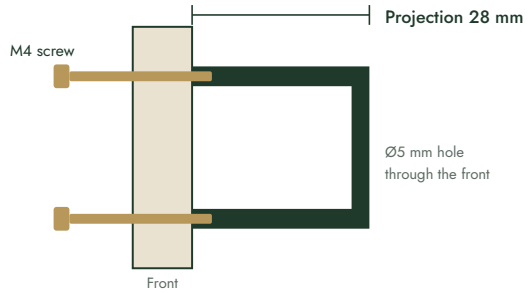


**Projection 28 mm** from the face of the front.
**Screw length ≈ front thickness + 4–5 mm** (18 mm front → M4 × 22 mm).

## Fitting in six steps

**01 Choose the position**
Drawers: usually centred, horizontal. Doors: vertical, 30–60 mm in from the opening edge. Keep it the same across the room.

**02 Mark the holes**
Mark the two hole centres exactly 320 mm apart. A drilling jig makes repeat doors quick and accurate.

**03 Drill the holes**
Drill Ø5 mm straight through, square to the face. Clamp a scrap block behind to stop the back breaking out.

**04 Check the screws**
Screws should be front thickness + 4–5 mm. For thicker or panelled fronts use longer M4 screws.

**05 Fix the handle**
Push the screws through from the back and thread them into the handle. Tighten by hand.

**06 Check and finish**
Check the handle is level or plumb, then nip the screws up. Do not overtighten — the threads are in the handle.

## Good to know

- Measure twice, drill once: test the hole spacing on a scrap piece first.
- On high-gloss or painted fronts, put masking tape over the marks before drilling.
- Use a sharp wood or brad-point bit for clean holes.
- Clean with a soft, damp cloth and dry. No abrasive pads or solvents.
- Avoid bleach and limescale removers near plated finishes.
- For indoor furniture. Keep away from direct heat sources.

## The BAGIO collection at ABJ

Same design and finish quality across the range. Choose a size and colour to match the rest of your room.

192 mm · Brushed steel | 192 mm · Champagne | 192 mm · Matt black | 320 mm · Matt black
320 mm · Champagne | 320 mm · Copper | 320 mm · Brushed steel

SCAN TO ORDER

Technical data from the manufacturer's published product card for the GTV BAGIO collection. Dimensions in millimetres and may vary by ±1 mm. Always check hole positions on a scrap piece before drilling. GTV is a trademark of GTV Poland S.A.; ABJ Accessories is an independent UK stockist. Questions about fitting or bulk orders: info@abjaccessories.co.uk.