TECHNICAL DATA SHEET

Ref. ABJ-TDS-WG-POBUWM90 · Rev. A · October 2026

Product code WG-POBUWM90

WARDROBE PULL-OUT · GTV ELITE COLLECTION

900 mm Pull-Out Metal Shoe Drawer, *soft close*

A pull-out wardrobe shoe drawer with two angled, solid perforated metal shelves — smart, easy to wipe and kind to suede and heels. Concealed full-extension runners with soft close; the frame adjusts to your wardrobe width.

RUNNERS & SCREWS INCLUDED

WARDROBE WIDTH	900 mm unit
FITS INSIDE	860–918 mm
MIN. DEPTH	500 mm inside
HEIGHT	165 mm
EXTENSION	Full
CLOSING	Soft close

Specification

Product code	WG-POBUWM90-10 / -20 / -60
Collection	GTV ELITE
Type	Metal shoe drawer — 2-tier solid perforated shelves
For wardrobe width	900 mm
Internal width range	860–918 mm
Product depth	483 mm
Product height	165 mm
Runners	Concealed, full extension, soft close
Min. internal depth	500 mm
Fixing	Screwed to the side panels
Material	Steel + plastic
Colours	White, black, anthracite
Screws included	Yes
Packaging	Individually packed

Ideal for

- Fitted wardrobes
- Walk-in wardrobes
- Hallway cupboards
- Boot rooms
- Bedroom furniture
- Dressing rooms

Wardrobe width

Front view of the wardrobe section

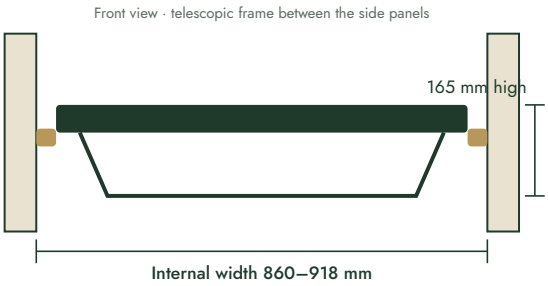

Fits an internal width of 860–918 mm – the frame adjusts by up to 58 mm.
Measure between the side panels at the height you will fit it.

Depth & fixing points

Side view of the side panel

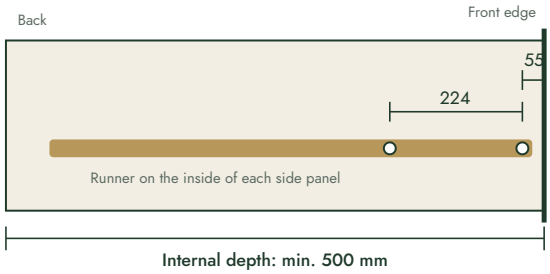

Internal depth at least 500 mm. Product depth 483 mm.
Runner fixings: first 55 mm from the front edge, then 224 mm behind it.

Fitting in six steps

01 Plan the height
Decide where the pull-out goes and mark a level line on both side panels at the same height.

02 Mark the fixings
On each side, mark the first fixing 55 mm from the front edge and the second 224 mm further back.

03 Fix the runners
Screw a runner to the inside of each side panel on your marks, level and parallel.

04 Fit the frame
Set the frame width to suit, sit it on the runners and push it back until it clicks in on both sides.

05 Add the insert
Drop the metal shoe drawer into the frame and secure it with the end connectors.

06 Adjust and check
Pull it out fully and push it closed – it should run smoothly and close softly. Fine-tune the front if needed.

Good to know

- Check your wardrobe is square: measure the internal width at the front and the back.
- Leave enough room above the pull-out for what you will store in it.
- Fit the lowest pull-out first and work upwards.
- Soft close engages in the last part of the travel – a gentle push is enough.
- Spread the load evenly; do not stand on or climb on pull-outs.
- Wipe with a soft, damp cloth. No abrasive pads or solvents.

The ELITE metal shoe drawer – every wardrobe width

Choose the size that matches your wardrobe section. Colours: white, black, anthracite.

600 mm | 700 mm | 800 mm | **900 mm**

SCAN TO ORDER

Technical data from the manufacturer's published product card and fitting instructions for the GTV ELITE wardrobe range. Dimensions in millimetres. Always check your cabinet before fixing. GTV is a trademark of GTV Poland S.A.; ABJ Accessories is an independent UK stockist. Questions about fitting or bulk orders: info@abjaccessories.co.uk.